


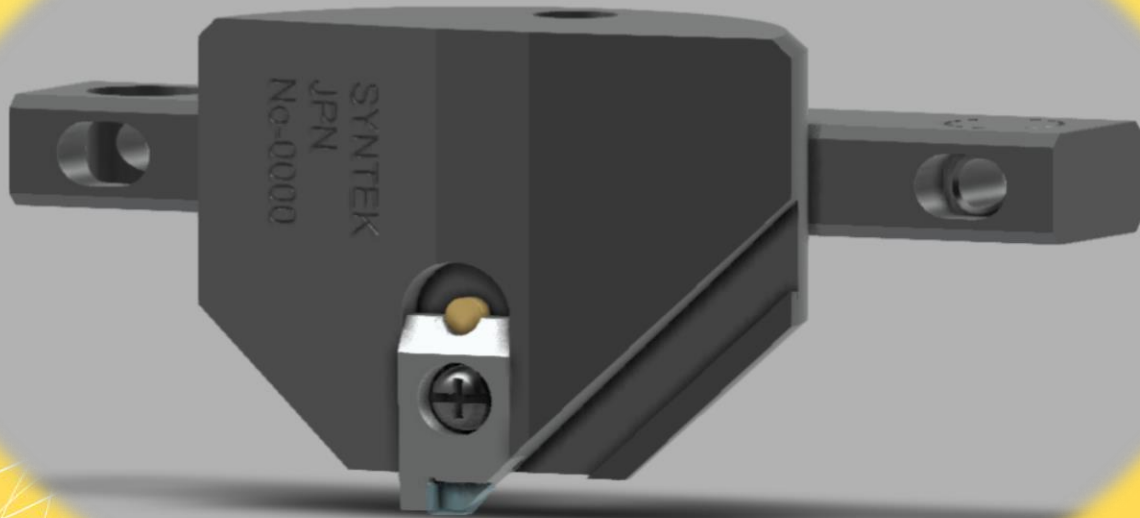



Detachable Burr Cutter

for Helio machines



【Improved the concern of current burr cutter】

Current burr cutter

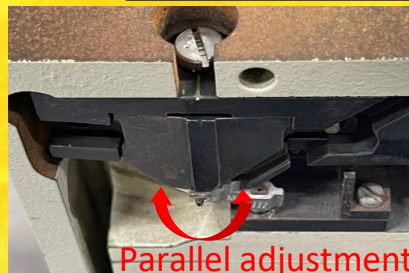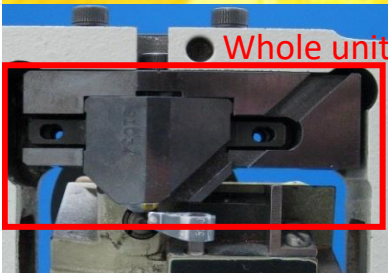


It is easier to replace burr cutter. After resharpening or exchanging, it doesn't need adjustment that takes normally 15 to 90 minutes as current you are using burr cutter.

If you use this product...

【Detachable burr cutter】

Once you set it up, Exchanging blade part and just Max.5 minutes of fine-tuning. Furthermore, three types of cutting edges with different R shapes are available to match the cylinder size (the side image is shown on the below).

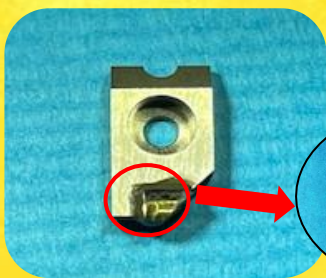


Side-view

※Comparison images of blades' R shape


R is larger

R is smaller

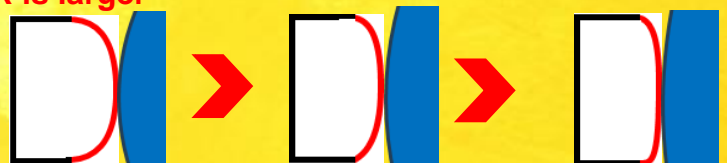

Blade type	Small	Middle	Large
Recommended Circumference range	650mm or less	650 to 750mm	750mm or more


How to use the detachable burr cutter

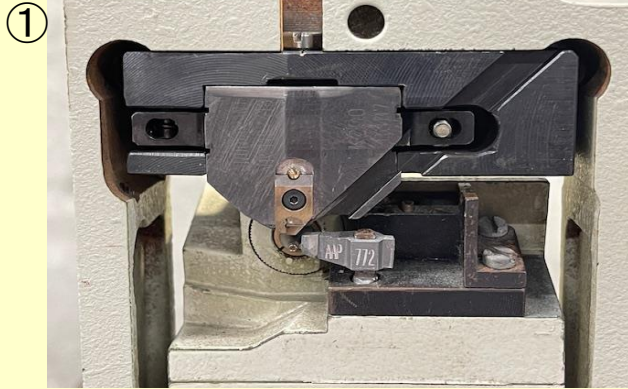


First time, it will set up in the same way as current cutter.
***It needs to adjust blade position and parallel.**



After use (a condition in which the blade needs to be replaced), it will loosen the screw as the photo.

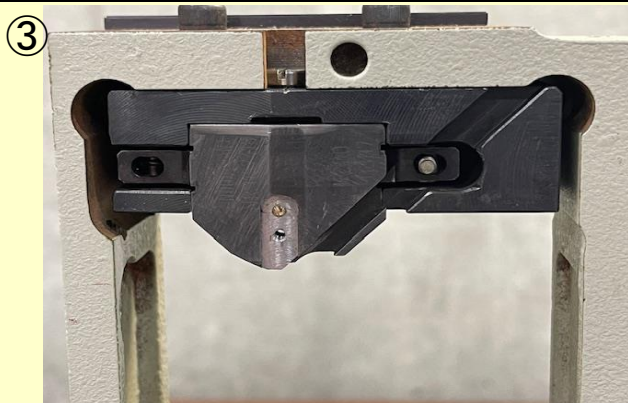

It will remove a blade part.

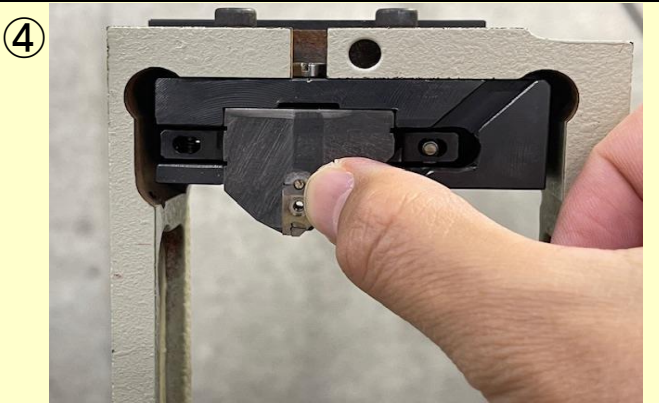

If you have another new one, it is possible immediately to place it.



It will be ready to use.
***It should check parallelism before using.**



Tips

****It is more convenient, if you have some blade parts (above picture) as a stock.**

Get rid of your worries !

